

\$aa6

Applies to: ED-549

Description:

Command to read the channel enable/disable status.

Command Syntax:

\$aa6[CS](CR)	
\$	Delimiter character
aa	Address of the device in hexadecimal format (00 to FF)
6	Command to read the enable/disable status
[CS]	Checksum
(CR)	Carriage Return

Response:

Valid Command: **!aavv[CS](CR)**

Invalid Command: **?aa[CS](CR)**

!	Delimiter for a valid command
?	Delimiter for an invalid command
aa	Address of the device (00 to FF)
vv	Two digit hexadecimal value. Bit 0 refers to channel 0, bit 1 refers to channel 1 etc. If the bit is 0, the channel is disabled, if the bit is 1 the channel is enabled.
00	Always 00
[CS]	Checksum
(CR)	Carriage Return

Examples:

Send a command to read the enable/disable status of the channels. Response means all the channels are enabled.

Command: **\$016(CR)**

Response: **!01FF(CR)**