

8.18 \$AAF

Description:

Reads the firmware version of the device.

Command Syntax:

<u>\$AAF[CS](CR)</u>	
\$	Delimiter character
<u>AA</u>	Address of the device to be configured in hexadecimal format (00 to FF)
F	Command to read the firmware version
<u>[CS]</u>	Checksum
(CR)	Carriage Return

Response:

Valid Command: !AA(Data)[CS](CR)

Invalid Command: ?AA[CS](CR)

!	Delimiter for a valid command
?	Delimiter for an invalid command
<u>AA</u>	Address of the device which responded
<u>(Data)</u>	Firmware version of the responding device.
<u>CHKSUM</u>	Checksum
(CR)	Carriage Return

Examples:

Reads the firmware version of the device and shows it as version 1.9.

Command: \$01F(CR)

Response: !011.9(CR)