

\$aa5vv

Applies to: ED-549

Description:

Command to enable or disable a specific channel

Command Syntax:

| \$aa5vv[CS](CR) | |
|------------------------|--|
| \$ | Delimiter character |
| aa | Address of the device to be configured in hexadecimal format (00 to FF) |
| 5 | Command to enable or disable the channel |
| vv | Two digit hexadecimal value. Bit 0 is channel 0, bit 1 is channel 1 etc. |
| [CS] | Checksum |
| (CR) | Carriage Return |

Response:

Valid Command: **!aa[CS](CR)**

Invalid Command: **?aa[CS](CR)**

| | |
|-------------|----------------------------------|
| ! | Delimiter for a valid command |
| ? | Delimiter for an invalid command |
| aa | Address of the device (00 to FF) |
| [CS] | Checksum |
| (CR) | Carriage Return |

Examples:

Send a command to enable only the first channel on the device.

Command: **\$01501(CR)**

Response: **!01(CR)**

Send a command to enable all the channels on the device

Command: **\$015FF(CR)**

Response: **!01(CR)**