

\$aa8Ci

Applies to: ED-549

Description:

Command to read the full scale range configuration for the specified channel.

Command Syntax:

\$aa8Ci[CS](CR)	
\$	Delimiter character
aa	Address of the device in hexadecimal format (00 to FF)
8	Command to read channel range configuration
Ci	Command to specify the channel to read where i is the input channel
[CS]	Checksum
(CR)	Carriage Return

Response:

Valid Command: !aaCiRrr[CS](CR)

Invalid Command: ?aa[CS](CR)

!	Delimiter for a valid command
?	Delimiter for an invalid command
aa	Address of the device which responded
C	Channel read command
i	Specifies the channel that the data was read from where i is the channel
R	Type code command
rr	Type code data from the specified channel where rr is the type code from the 'Range settings and data formats' table
[CS]	Checksum
(CR)	Carriage Return

Examples:

Read the range configuration of the first channel

Command: \$018C0(CR)

Response: !01C0R09(CR)

Read the range configuration of the fourth channel

Command: \$018C3(CR)

Response: !01C3R0B(CR)