

## \$aaM1

Applies to: All analogue input/output products

Description:

Command to read the device location

Command Syntax:

<b>\$aaM1[CS](CR)</b>	
<b>\$</b>	Delimiter character
<b>aa</b>	Address of the device in hexadecimal format (00 to FF)
<b>M1</b>	Command to read the device's location
<b>[CS]</b>	Checksum
<b>(CR)</b>	Carriage Return

Response:

Valid Command: **!aa(Data)[CS](CR)**

Invalid Command: **?aa[CS](CR)**

<b>!</b>	Delimiter for a valid command
<b>?</b>	Delimiter for an invalid command
<b>aa</b>	Address of the responding device
<b>(Data)</b>	Location of the device
<b>[CS]</b>	Checksum
<b>(CR)</b>	Carriage Return

Examples:

Reads the device location. Command sent to the ED-549 and a valid response is returned with the device's location.

Command: \$01M1(CR)

Response: !01machine1(CR)