

## ~aaL(Location)

### Description:

Command to set the device location.

### Command Syntax:

<b>~aaL(Location)[CS](CR)</b>	
~	Delimiter character
<b>aa</b>	Address of the device to be configured in hexadecimal format (00 to FF)
L	Command to set the location of the device
<b>(Location)</b>	New device location (10 characters max)
<b>[CS]</b>	Checksum
(CR)	Carriage Return

### Response:

Valid Command: **!aa[CS](CR)**

Invalid Command: **?aa[CS](CR)**

!	Delimiter for a valid command
?	Delimiter for an invalid command
<b>aa</b>	Address of the responding device
<b>[CS]</b>	Checksum
(CR)	Carriage Return

### Examples:

Send command to set the device location.

Command: ~01LRoom1(CR)

Response: !01(CR)